Instructions for a simple installation

Sawing


Use **coarse-tooth saw blades** for wood (<24T, Milwaukee, Bosch, Festool) to achieve clean and simple cuts. The material is harder than wood and, due to its plastic content, can cause greater wear on fine-tooth blades compared to wood. Also use a **lower rotation speed** for the best result.

Fixing

When fixing into a wooden stud, use slightly **longer screws**, for example double plasterboard screws. Since the material is somewhat harder, there is a certain risk that the stud may splinter before the screw head is properly countersunk if the screws are too short. For a clean countersink of the head, it is recommended to use the **hard plasterboard screw** (type EJOT Extra Plus 4.2x30mm). A nail/staple gun also works well.

Painting

When the Recoma board is used as a finishing layer and perfectly smooth walls are desired, it is best to use a **renovation wallpaper** such as Easy Cover or an equivalent product for optimal results. The board is not as smooth as plaster, and a difference in texture may appear between the board and any plastered surfaces. The material may also lift slightly around some screw heads. A **full skim coat** can also provide a perfectly smooth surface.

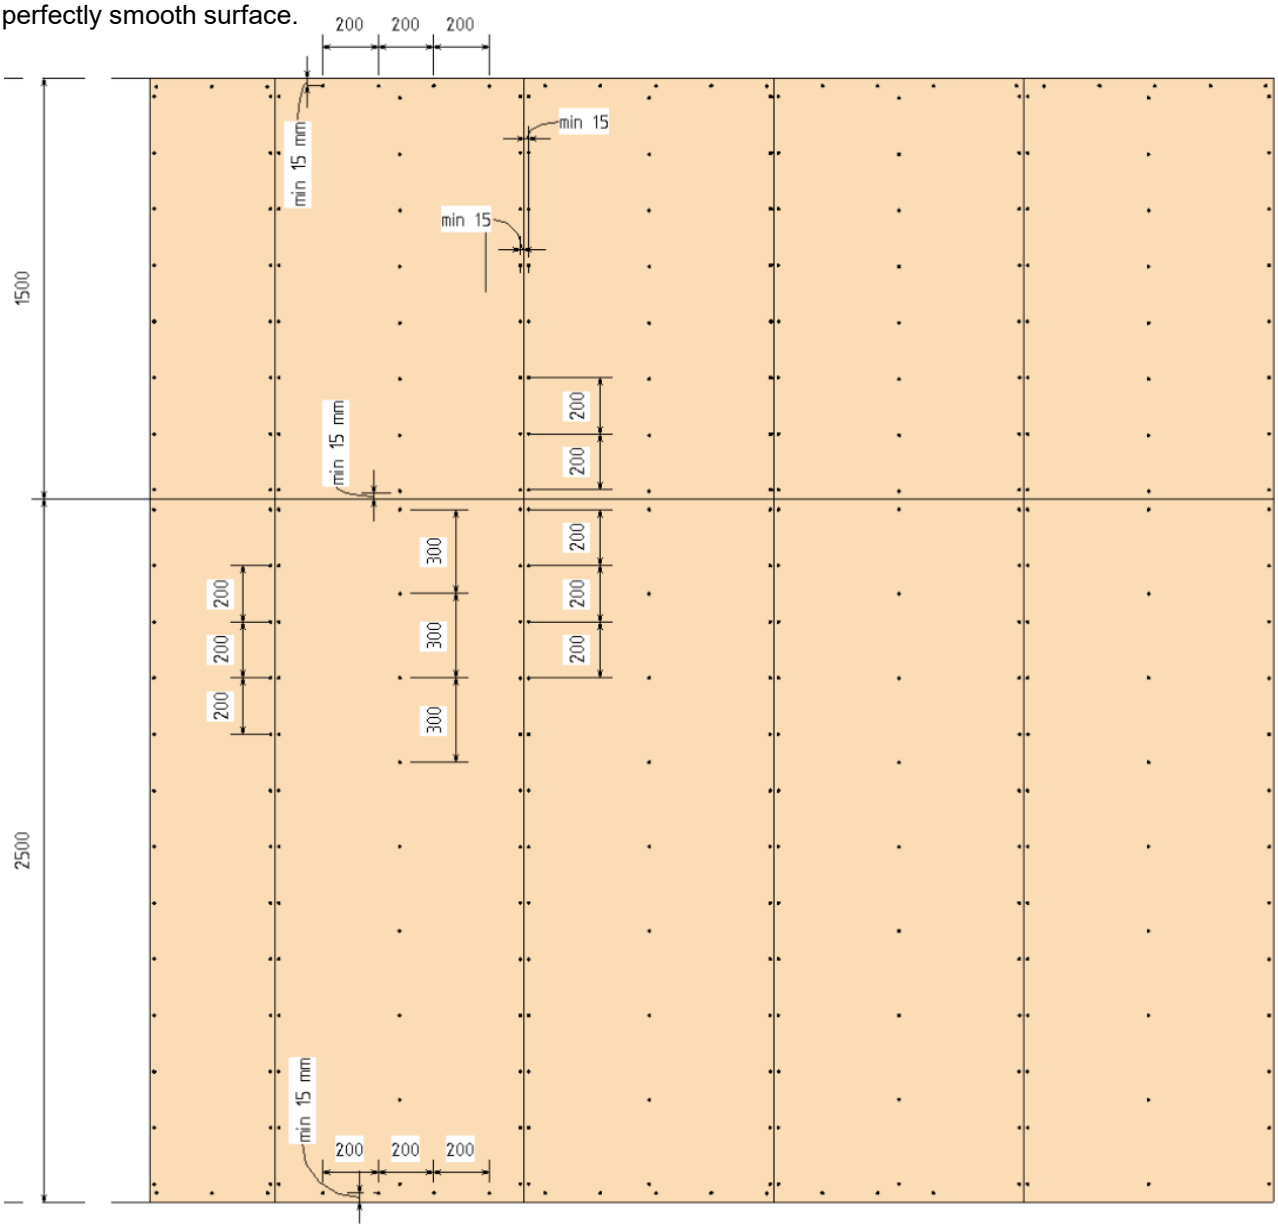

Recoma Benelux
Mechelsesteenweg 455/2, 1950 Brussels
www.recoma.com